



## Section 2.2: Firmware Set-Up

Written By: Leland Crowther


## Step 1 — Download and Save File




- Click the link below find the firmware download on our website
- [Documentation Page](#)
- Download and save file

## Step 2 — Open Duet Web Control



- Power on printer
  - Open browser
  - Open Duet Web Control in your browser by typing in your printers IP address
-  [See Getting Connected Guide for more info](#)

## Step 3 — Upload Firmware

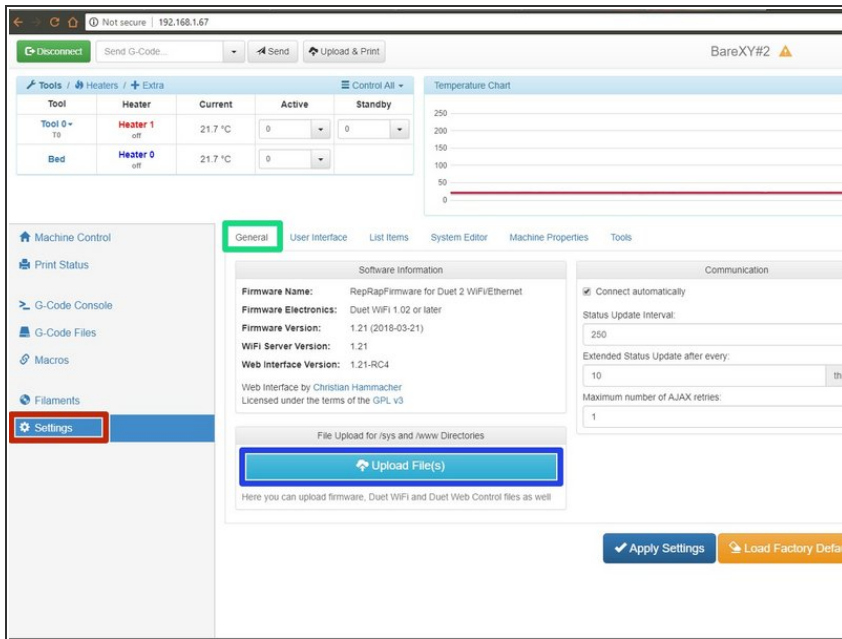

- Click "settings"
- Click "General"
- Click "Upload File(s)"
- Select the BareXY\_Firmware.zip file you just downloaded. Open and install it
- ⓘ Tip: There is no need to unzip the file

## Step 4



- Your printer will now ask for a password when you try to connect to it. The default password is "password"
- Continue to Section 3